



## ***Programming the Remote for Your TV***

### **Set Up Remote for TV: (code search method)**

1. Turn on TV
2. Press **TV** key
3. Hold down **SHIFT** (TV key will blink twice)
4. Press **991** (TV key will blink twice)
5. Press "**program +**" over and over until TV turns off ;  
(if you go too far, back up by pressing "**program -**")
6. Press **SHIFT** to store
7. Test to see if it works

### **Set Up Remote for TV: (using existing codes)**

1. Turn on TV
2. Find TV Code\*
3. Press **TV** Key
4. Hold down **SHIFT** (TV key will blink twice)
5. Enter TV Code\* (TV key will blink twice)
6. Press **Power** (TV should turn off if correct code)
7. Repeat steps 3-6 if TV does not turn off

\*TV codes can be found at [www.goNDTC.com](http://www.goNDTC.com)

### **Set Up Volume for TV:**

1. Press **STB** key
2. Hold down **SHIFT** (STB key will blink twice)
3. Press **993** (STB key will blink twice)
4. Press **TV** key (TV key will blink twice)
5. Test to see if it works



[www.goNDTC.com](http://www.goNDTC.com)  
**701.662.1100 or 1.800.880.4213**