


Recording Settings (Requires DVR Service)

1. From the Settings Menu, arrow to the right and choose Recording to make changes to your settings for recorded programs.

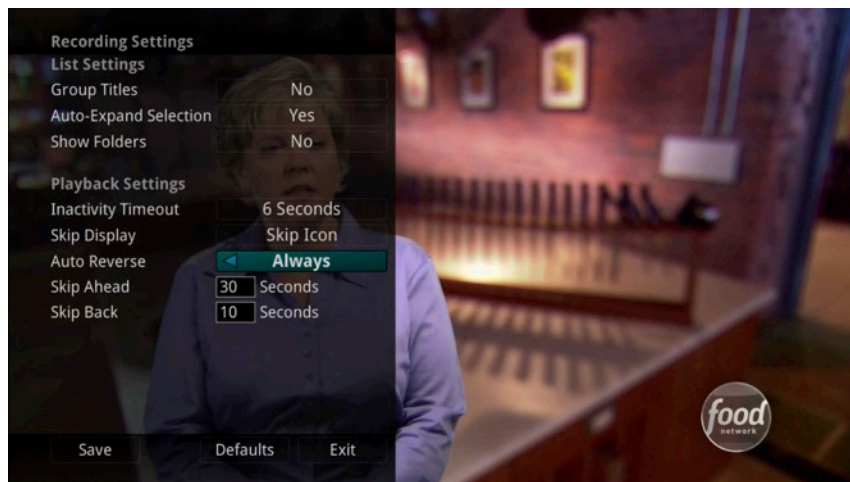

Group Titles

Group all recorded episodes with the same title rather than listing each episode individually. The *Skip Forward* button will toggle between Grouped and Ungrouped listings.

Auto Expand Selection

Choose this option to automatically display information for the selected recording.

Show Folders

When the Show Folders field is set to “Yes”, all recordings and future recordings will be grouped into folders when you view your Recordings Lists. With Show Folders set to No, all recordings and future recordings will be displayed individually. Keep in mind that if Group Titles is set to Yes, programs will be grouped together even if Show Folders is set to No. When viewing your Recording Lists the *Skip Forward* button will toggle between folders and individual recordings.

Inactivity Timeout

This setting adjusts the length of time the Status Bar remains on the screen while you are watching a recorded program after a period of inactivity. Choose from 1- 10, 12, 15, 30, 45 seconds, one or two minutes, or Never.

Skip Display

Choose between displaying the playback bar or the fast forward/replay icons during recorded show playback.

Auto Reverse

Select if you would like the playback to include an auto reverse feature Always or Never.

Skip Ahead

Skip ahead while watching a recording or while watching live TV. This can be set from 1-999 seconds.

Skip Back

Skip back while watching a recording or while watching live TV. This can be set from 1-999 seconds.