

## Program the Remote to Your Other Devices (AUD, DVD, VCR)

*The AUD, DVD and VCR mode keys have a default setting which means they are automatically set to the STB. If you would like to program these mode keys to your devices, please follow the instructions below to lock the default setting.*

1. Press and Hold **SETUP**, until the mode key blinks twice.
2. Type **9-9-2**.
3. Press the **mode** key, AUD, DVD or VCR you desire to program, twice.
4. This will remove the STB mode and a new Audio, DVD or VCR code can now be programmed.
5. Manually turn **ON** the device that you want to setup on the remote.
6. Press and release the **mode** key for the device you are programming, it will blink once.
7. Press and Hold **SETUP**, until the mode key blinks twice.
8. Press and release the **mode** key. The mode key will stay lit.
9. Find your AUD, DVC or VCR device brand for the chart (contact NDTC) and note the DIGIT key assigned to your brand. Press and hold down the DIGIT key for your device/brand while pointing the remote to the device.
10. Let go of the key when your device turns OFF. Setup for that device is complete.

